



# **I-VSE 5000**

# **STATIC NEUTRALIZING BLOWER**

---

## **INSTALLATION AND OPERATING INSTRUCTIONS**

# TABLE OF CONTENTS

---

<b>1. SAFETY WARNINGS.....</b>	<b>1</b>
<b>2. INTRODUCTION .....</b>	<b>2</b>
Receipt of Equipment.....	2
Return Shipments.....	2
<b>3. SPECIFICATIONS.....</b>	<b>3</b>
<b>4. INSTALLATION.....</b>	<b>4</b>
<b>5. OPERATION .....</b>	<b>5</b>
Start Up.....	5
<b>6. TROUBLESHOOTING.....</b>	<b>6</b>
Operational Check.....	6
If Equipment Fails To Reduce Static Charges From Target Surface(s) .....	6
If The Ion Balance Is Greater Than +/-30 Volts .....	6
<b>7. MAINTENANCE .....</b>	<b>7</b>
Ionizing Emitter Points.....	7
Thorough Cleaning .....	7
<b>8. PARTS AND ACCESSORIES.....</b>	<b>8</b>
<b>9. WARRANTY AND SERVICE.....</b>	<b>9</b>

# 1. SAFETY WARNINGS

---

**PLEASE READ INSTRUCTIONS COMPLETELY BEFORE STARTING INSTALLATION**

**ALL INSTALLATION AND TROUBLESHOOTING OPERATIONS MUST BE PERFORMED BY QUALIFIED TECHNICAL PERSONNEL**

This instruction manual uses symbols to identify dangerous situations as follows:



**NOTE** – If any damage has occurred during shipment, notify the local carrier at once. A report should also be forwarded to Simco-Ion, 2257 North Penn Road, Hatfield PA 19440.



**NOTE** – Statements identified with a **NOTE** indicate precautions necessary to avoid potential equipment failure.



**CAUTION** – Statements identified with a **CAUTION** indicate potential safety hazards.



**NOTE** – This equipment must be correctly installed and maintained. Adhere to the following notes for safe installation and operation.

1. Read instruction manual before installing or operating equipment.
2. Only qualified service personnel are to perform installation and repairs.
3. All equipment must be properly grounded, including the machine frame to which the equipment is mounted.
4. Do not operate device in excess of specifications.



**NOTE** – Do not insert objects into the intake or outlet of the ionizing blower.



**CAUTION – Electrical Shock Hazard**

Always disconnect power supply before connecting or disconnecting static neutralizing equipment. Avoid touching static neutralizing point when power supply is energized.



**WARNING – Fire Hazard**

Do not install or operate equipment in close proximity to any flammable solvents or in explosive atmospheres.

## 2. INTRODUCTION

---

The I-VSE 5000 static neutralizing blower eliminates static charges in demanding industrial environments. The I-VSE 5000 neutralizes areas up to 80 square feet and features a passive ionization circuit that maintains ion balance, even during voltage fluctuations.

The I-VSE 5000 features

- Passive ionization circuit
- High volume variable speed fan
- Built-in air diffuser
- Optional adjustable-height stand is available

### Receipt of Equipment

1. Carefully remove the equipment from its carton.
2. Inspect contents for damage that may have occurred during shipment. If any damage has occurred, the local carrier should be notified at once. A report should be forwarded to Simco-Ion, 2257 North Penn Road, Hatfield PA 19440, and (215) 822-6401.
3. Empty the carton to ensure that small parts are not discarded.

### Return Shipments

Prior to returning goods, contact a Simco-Ion Customer Service Representative for a Return Authorization Number. This number should be included on the packing list. All correspondence should also reference the Return Authorization Number. Any item being returned should be shipped prepaid and packed to provide adequate protection.

### 3. SPECIFICATIONS

---

<b>Operating Voltage</b>	120 VAC, 50/60 Hz
<b>Power</b>	45 Watts
<b>Dimensions</b>	10"L x 12"W x 6-1/4"H
<b>Weight</b>	8 lb
<b>Output</b>	100-212 CFM (adjustable)
<b>Air Speed</b>	850 FPM @ 2 ft from blower, fan speed high
<b>Noise Level</b>	68 dB @ 2 ft from blower, high fan speed
<b>Discharge Time</b>	0.6 sec @ 1 ft from blower (1000V to 100V), typical

## 4. INSTALLATION

---

1. For maximum effectiveness, position the I-VSE 5000 as close as possible to the charged surface to be neutralized. Direct the air stream longitudinally, and in the same direction as, the target material movement to maximize the time the charged surface remains in the air stream.
2. Locate blowers after the material has received its static charge. If the material is subject to ongoing friction, additional static control devices may be needed.
3. Blowers may be located above and/or below a web.
4. Ensure that the ionized air stream covers the entire target surface, and that the material to be neutralized is not in direct contact with a background surface.
5. The blower may also be placed on an OPTIONAL vertically adjustable floor stand that can be moved and positioned as required.
6. The unit **MUST** be grounded for ionization to occur.

## 5. OPERATION

---

Typical Performance Data			
Distance (ft) from Ionizer	Decay Time (sec) [1' left of center]	Decay Time (sec) [on centerline]	Decay Time (sec) [1' right of center]
1	19.3	0.6	18.3
2	4.4	1.0	4.0
3	2.8	1.4	3.0
4	3.8	2.0	4.2
5	4.3	2.5	5.0
6	4.6	3.6	5.2
7	5.8	4.3	6.3
8	7.0	5.5	7.5
9	8.3	6.8	8.5
10	10.0	8.8	10.3

Decay times represent 90% neutralization of a 1000 VDC Plate (1000 V to 100 V) at specified distances. Decay times measured per ANSI EOS/ESD Standard 3.1.

### Start Up

1. Turn power switch to ON position.
2. Turn fan speed knob to adjust air velocity. Low fan speed should be adequate for most applications. High fan speeds may be used for larger areas.

## 6. TROUBLESHOOTING

---

### Operational Check

1. Rub a small strip of plastic film until a static charge is developed (cellophane works well). The charge can either be measured with an electrostatic fieldmeter or will be evidenced by the film's attraction to a grounded metal surface.
2. Pass the film in front of the blower for five seconds at a distance of one foot. Check for any charge remaining on the film as in Step 1.
3. If the static charge has been neutralized, then the device is working properly.

### If Equipment Fails To Reduce Static Charges From Target Surface(s)

1. Deenergize the power supply.
2. Ensure all ground connections are intact.
3. Check that all cable connections are tight.
4. Verify fuse located in the power inlet on the back panel is not blown. If it is, slide out the fuse drawer, remove the fuse and replace with 5x20 mm 5A slo blow fuse (Littlefuse 0239005.HXP or equal).
5. Check that the four screws holding the front bezel in place are tight, but not over tightened, and that the word "POWER" is oriented to the right side as you face the bezel.
6. If equipment stills fails to reduce static charge, clean ionizer emitter points, see Section 7 Maintenance.

### If The Ion Balance Is Greater Than +/-30 Volts

1. Verify line cord is plugged into a properly grounded 3-terminal receptacle.
2. Verify adapters or extension cords used with the I-VSE 5000 are all properly installed, are all of 3-terminal type, and are all properly grounded.
3. Verify that the front bezel is NOT grounded (and that a ground lead from a balance meter, or other instrument, is not attached to the bezel).
4. Verify that a known ground is in use or fan guard on back panel of the I-VSE 5000 is used as a ground point.
5. Ensure NO conductive or antistatic sprays have been in use around the ionizer. If necessary thoroughly clean the ionizer, see Section 7 Maintenance.



## 7. MAINTENANCE

---



**NOTE** – Only qualified service personnel are to perform maintenance tasks.



### **CAUTION – Electrical Shock Hazard**

Deenergize all power supplies before performing any maintenance tasks.

### **Ionizing Emitter Points**

1. Frequency of emitter point cleaning should be at least once monthly. If points are extremely dirty when cleaning, increase frequency to weekly. In very dirty environments, it may be necessary to clean points daily or at the end of each shift.
2. Simply turn OFF the unit and press a soft pencil eraser onto each point and gently twist to remove any buildup from the ionization points. To remove inks and resistant coatings, wipe the point with Isopropyl Alcohol (other cleaners may damage parts).
3. Remove dust from the air inlet and outlet with a brush or vacuum.



**NOTE** – Never use hard or sharp objects to scrape ionization points.

### **Thorough Cleaning**

1. Frequency of thorough cleanings should be at least once annually. If unit is extremely dirty when cleaning, increase frequency to quarterly. In very dirty environments, it may be necessary to thoroughly clean the unit even more frequently.
2. Simply turn OFF the unit and remove the bezel from the front of the blower by loosening the four cap screws that secure it.
3. Blow out the entire bezel assembly with clean dry compressed air.
4. Perform Ionizer Emitter Point cleaning.
5. Blow out the entire air channel and each fan blade with clean dry compressed air.
6. Wipe the air channel with a soft cloth dampened with a mixture of 50% Isopropyl Alcohol and 50% distilled water.



**NOTE** – Ordinary glass and household cleaners leave behind a conductive residue that impairs ionizer operation. Never allow such cleaners to contact the bezel or interior of the blower.

1. Allow assembly to air dry completely.
2. Reinstall the bezel assembly onto the front of the ionizer with the word “POWER” on the right side as you face the bezel.
3. Tighten the four cap screws until the bezel is snug against the front of the blower case.

## 8. PARTS AND ACCESSORIES

---

Part Description	Part Number
Emitter Assembly	10631-001
Air Filter Kit (includes frame)	10790
Replacement Air Filters (pkg of 10)	5050974
Portable Floor Stand (optional)	5050975

## 9. WARRANTY AND SERVICE

---

This product has been carefully tested at the factory and is warranted to be free from any defects in materials or workmanship. Simco-Ion will, under this warranty, repair or replace any equipment that proves, upon our examination, to have become defective within one year from the date of purchase.

The equipment being returned under warranty should be shipped by the purchaser to Simco-Ion, 2257 North Penn Road, Hatfield PA 19440, transportation prepaid and insured for its replacement cost. Prior to returning any goods for any reason, contact Simco-Ion Customer Service at (215) 822-6401 for a Return Authorization Number. This number must accompany all returned items.

This warranty does not apply when the equipment has been tampered with, misused, improperly installed, altered, has received damage through abuse, carelessness, accident, connected to improper line voltage, or has been serviced by anyone other than an authorized factory representative.

The warranty does not apply when Simco-Ion parts and equipment have been energized by other than the appropriate Simco-Ion power supply or generator, or when a Simco-Ion power supply or generator has been used to energize other than Simco-Ion parts and equipment. Simco-Ion makes no warranty, expressed or implied, nor accepts any obligation, liabilities, or responsibility in connection with the use of this product other than the repair or replacement of parts stated herein.

**Simco-Ion**

2257 North Penn Road

Hatfield, PA 19440

(215) 822-6401

(800) 203-3419

[www.simco-ion.com](http://www.simco-ion.com)

[customerservice@simco-ion.com](mailto:customerservice@simco-ion.com)

© 2024 Simco-Ion. Printed in the U.S.A.